



GEOSATPRO 3500 Update Instructions

Adding New Frequency

1. On GEOSATPRO remote, press MENU. you will see a screen with date and time at the top and a list of eight applications.
2. Push Blue button: this will take you to settings
3. Push OK button on Dish Settings
4. Push Down button three times to get to Transponder
5. Push OK button: this will bring a drop down menu with the different frequencies will appear
6. Push Down button until you are on frequency 12028Mhz/22000Kbp
7. Press OK button: drop down menu will disappear

Scanning Channels

1. Still on Transponder, press Down button six times to get to Service Search
2. On Service Search, press OK Button: this will change screens
3. On the new screen, Satellite will be at the top: Press Down button four times to get to Scan Type.
4. On Scan Type, Press OK button to change from Blind Scan to Manual Scan. Frequency and Symbol rate will appear: Verify 12028 for Frequency and 22000 for Symbol rate
5. Press Down button six times to get to Start
6. Press OK button: a search mode will appear, wait for search to finish
7. A confirm screen will appear: Press Ok button on Save: this will return you to your main TV.
8. Press OK button to bring up channel list, then press Down button and look for 3ABN S2
9. Press OK button on 3ABN S2: once you see this, the change was successful

Deleting Channels

1. Push OK Button: This will bring up channel list
2. Press blue button: This will bring up Service List Manager : On right side under Select Edit Mode: Press down button to Delete Service
3. Press OK button on Delete Service: this will bring you to the left side of the screen
4. Press OK button on channel you want to delete: this will bring channel to center on Selected Service
5. Once done with deleting channels, press green button: a confirm screen will appear
6. Press OK button on Delete: you will be left with channels not deleted
7. Press Exit: this will return you to your main TV

September 14, 2023
3ABN Support