



GT MEDIA V9 Prime Update Instructions

Adding New Frequency

1. On GT MEDIA remote: press Menu button
2. A screen with five applications and a small viewer screen will appear. Install will be higher or raised up than other options: press OK Button
3. A new screen will appear. Press Right Button one time. Satellite list will be highlighted
4. Press Down button four times: TP List will be highlighted
5. Press OK Button: will take you to TP List screen
6. At the top of screen confirm satellite name [LNB1] G19
7. Check to see if Frequency 12028 22000 is listed
8. If frequency is listed: push Down button to Frequency, then skip to step 16
9. If frequency is not listed: press Red button
10. Add TP screen will appear: Frequency will be highlighted
11. Enter 12028 in frequency
12. Press Down button: you will go to Symbol Rate
13. Enter 22000 in Symbol Rate
14. Press Down button five times: that will take you to Save
15. Press OK Button on Save: that will take you back to TP List

Scanning Channels

16. Frequency 12028 22000 will be highlighted: press Blue button (TP Search will appear)
17. OK will be highlighted: press OK button
18. A search will happen. Wait until the search is complete. Search End will appear: press OK button to return you to TP List
19. Press Exit button four times: it will return you to main TV
20. Press OK button to bring up channel list
21. Verify 3ABN S2 is listed: if listed, update was successful
22. Use arrow button to navigate to 3ABN S2
23. Once 3ABN S2 channel is highlighted, press OK button
24. Press Exit button: to return to main TV

Deleting Channels

1. Press Menu button: A screen with five applications and small viewer screen will appear, Install will be highlighted
2. Press Right button one time: Channel will be higher or raised up than other options
3. Press OK button: will change to TV Channel List screen

4. Press OK on TV Channel List: you will enter into channel list; a channel will be highlighted
5. Press Blue button: it will say Delete Edit above the first channel
6. Press OK button on channels you wish to delete. It will place an X next to channel to be deleted
7. Press the Exit button two times: a screen will appear, asking "Are you sure to save?"
8. Press OK button on Yes (Yes will be highlighted)
9. You will return to the channel list. Press Exit three times to return to main TV

September 14, 2023
3ABN Support